
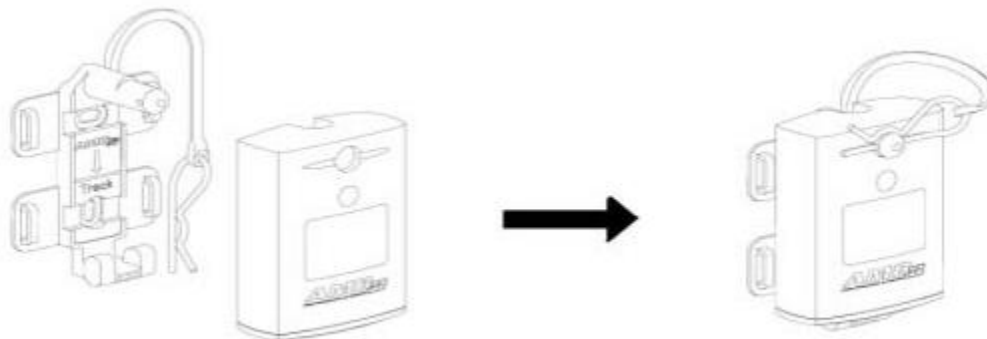


M-40 Speedway Transponder Mounting

Installation of a transponder on a Car. Fix the transponder vertically, at a maximum of 60 cm (2 ft) above the track, closer is better. We recommend no more than 15" if possible.

Make sure that the transponder has a clear view to the track with no metal or carbon fiber underneath. Installation of a transponder Fix the holder on car with fixing rod on top by using tie-wraps, screws or rivets.

Position is **RIGHT REAR AXLE ONLY!**

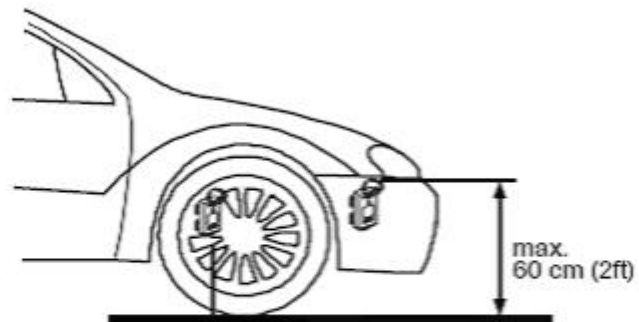

Any mounting will work as long as it is positioned vertical and has no obstruction between the bottom of the transponder and track. The clip shown is available from MyLaps for \$15 with shipping.



<https://www.mylaps.com/en/products/holder-clips-and-adapter/277>